

Connect a monitor to the uPG again, enter BIOS environment by pressing DEL during boot up.

And then please check the settings below, in **bold** are the sections and below it are the settings how they should be we think!

Standard CMOS Features

Halt On [No Errors]

Advanced BIOS Features

no changes...

Advanced Chipset Features

System BIOS cacheable [Disabled]

Integrated Peripherals

OnChip IDE Device

no changes...

Onboard Device

USB Controller [Disabled]

AC97 Audio [Disabled]

SuperIO Device

Onboard FDC Controller [Disabled]

Onboard Parallel Port [Disabled]

check:

Onboard Serial Port 1 [3F8/IRQ4]

Onboard Serial Port 2 [2F8/IRQ3]

SecondIO Device

Onboard Serial Port 3 [3E8]

Serial Port 3 Use IRQ [IRQ10]

Onboard Serial Port 4 [2E8]

Serial Port 4 Use IRQ [IRQ11]

Power Management Setup

Power-Supply Type [AT]

PnP/PCI Configurations

Resources Controlled By [Manual]

IRQ Resources

IRQ-5 assigned to [Legacy ISA]

IRQ-7 assigned to [Legacy ISA]