5 Specify the IP address, subnet mask, and default gateway, and click [OK].



	LAN connection	Peer-to-peer connection example
IP address	Specify the value provided by your system administrator.	192.168.0.1
Subnet mask		255.255.255.0
Default gateway		Not used

For a peer-to-peer connection, set the PC's IP address to 192.168.0.2, and the subnet mask to 255.255.255.0.

 Reference
 When using TCP/IPv6, the following window appears. For the details of setting contents, ask your system administrator.

in autilities aux for site appropriate 1996 settings.
an yj
atically
esses:

- **6** Close the [Local Area Connection Properties] and [Network Connection] dialogs.
- 7 Click [Protect the system and return to normal operation.].

The microscope will restart.

Completely disabling system protection

To install applications that run on Windows7, it is necessary to disable system protection completely. This must be done when networking the system through a domain.



1 Click [Network/Security Settings...] on the Settings menu.

ettings	
	Network/Security settings
	Lens settings
[Calibration Settings
[User settings
[Show software keyboard

5

The security administration password input dialog appears.

2 Enter the password and click [OK].

VHX	State of the local division of the local div	
Security admin password:		
ОК	Cancel	

The password is preset to "VHX" (half-width characters all caps) at the time of shipping.

The Network/Security settings dialog appears.

3 Check the [Install a new program or driver] option, and select [Install a new program], and click [OK].

letwork/Security settings	
System protection settings	
System p	protection: Enabled
Install a new program	or a driver
Install a driver or ad	just network settings
(Cancel the	e system protection temporarily.)
Install a new progra	m
(Permanen	tly disable system protection.)
*) These sett	ings will be effective after restart.
Set the calibration password Use password Calibration password:	
Password confirmation:	
Change security admin passw	vord
Security password:	•••
Password confirmation:	•••
OK	Cancel

You will be prompted to restart the system.

VHX		and the second second	
	A restart is required to enable th	ne settings. Do you want to rest	art the system now?
		<u>Y</u> es	No

4 Click [Yes].

The system will restart and a confirmation dialog for disabling the system protection will appear.

5 Read the warning on the dialog carefully. If you accept the risks, check the checkbox and click [Yes].



The system will restart with the system protection disabled.



6 Install the application as necessary.

Reference

The following menus will change when system protection is completely disabled.

 You can now choose to exit only the VHX application by clicking [Exit] from the VHX MENU.



 The IP address, FTP, and share folder settings should be configured using the functions provided with Windows7. These functions are accessed by clicking [Exit] from the VHX MENU and selecting [Exit VHX application].

N Point

If the system protection is disabled completely, the system may prompt you for the ID and password when the VHX-5000E starts up. If prompted, enter the ID and password shown below. The below credentials to be used for the master domain log in if networking through a domain. ID: VHX_Admin Pass: VHXADMIN 13