

User manual

FLOPPY TO USB CONVERSION UNIT FOR STAUBLI-JC4 LABEL WEAVING MACHINE

Features:

- Use ordinary usb pen driver as the medium for transfer design.
- Same size, same interface with floppy driver, easy to install.
- Connect through floppy driver interface, no need to modify system settings.
- Up to 100 partitions with 1.44Mb capacity each partition.

Installation:

shut down the power of machine, connect through 34pin floppy driver interface.

Install a SFR1M44-U100 on computer as a floppy driver A.

Function:

Two 8segment LED correspond with partitions, 00 – 99.

Two button used to select the 8segment LED from 00 – 99, left is tens-digit, right is single-digit.

Description:

1. 100 partitions regard as 100 pieces floppy disk, every partition need to format on computer before used to store files.
2. During the read and write operation, do not remove usb pen driver.

Note:

1. SFR1M44-U100 is suitable with STAUBLI JC4, also can be used on JC5, MULLER 3 and BONAS.
2. If the lamp of unit is not on when reading or writing data with USB pen driver, please remove the jumpers S1 to MO.

